

Glass Mousepad Care and Safety Manual

Introduction.....	1
Important Notes.....	1
Use and Safety Instructions.....	1
Cleaning and Maintenance.....	2
What to Avoid.....	2
Drying After Use.....	2
Handling.....	2
Safety Around Children and Pets.....	2
Disposal.....	3
Warranty and Liability Disclaimer.....	3
Contact.....	3

Introduction

This care, safety, and maintenance guide covers the general safe use, cleaning, storage, and upkeep of glass mousepads. Following these instructions will help preserve your mousepad's original look, feel, and performance for as long as possible.

Important Notes

Glass mousepads are designed for use on a flat, clean, and dry desk surface.

Always check any product-specific instructions or accessory information included with your item. If you notice a crack, chip, shattering, or any other damage to the glass surface, stop using the product immediately.

WARNING: Broken glass can cause cuts. Do not touch broken pieces with bare hands. Use protective gloves, sturdy paper/cardboard, or other suitable tools to clean up, and safely wrap the fragments before disposal.

Glass mousepads are durable, but like any glass product, they require careful handling and proper storage.

Use and Safety Instructions

Always place the mousepad on a stable, flat, and clean desk surface.

Before use, make sure both the underside of the mousepad and the desk surface are clean and dry.

Do not drop, strike, or place heavy objects on the mousepad.

Do not stand or sit on the mousepad, and do not use it as a coaster, table mat, cutting board, or heat-resistant surface.

Keep the mousepad away from hot objects, open flames, concentrated pressure, and sharp objects.

For the best experience, keep your mouse feet clean. Dirty or worn mouse feet can affect glide smoothness and wear down the glass surface faster.

Attach the included PTFE skates to a clean, dry mouse base and make sure they're firmly secured.

Cleaning and Maintenance

Light cleaning

Wipe the mousepad surface with a dry, clean microfiber cloth to remove dust, fingerprints, and light dirt.

If needed, use the same cloth to clean the underside and feet of your mouse.

Deep cleaning

Use a clean microfiber cloth.

Lightly dampen the cloth with clean water and a small amount of mild dish soap.

Gently wipe the glass surface, focusing on areas with grease, stains, or heavier buildup.

Never spray liquid directly onto the mousepad — always apply the cleaning solution to the cloth first.

Dry the surface with a clean, dry cloth.

Clean the rubber base with a lightly dampened cloth if needed; plain water is usually enough for the base.

Make sure both the glass surface and the base are completely dry before using the mousepad again.

What to Avoid

Abrasive sponges, hard scrubbing, and rough cleaning tools.

Chlorine, ammonia, acetone, strong solvents, or other harsh chemicals.

Soaking the mousepad, rinsing it under a tap, submerging it in water, machine washing, dishwashing, or high-heat drying.

Spraying liquids directly onto the product.

Drying After Use

Glass mousepads typically dry quickly, but the surface must be completely dry before use.

Do not use a hairdryer, radiator, or other strong heat source to dry it.

Before placing your mouse back on the pad, check that no moisture or cleaning residue remains on the surface.

Handling

Avoid prolonged direct sunlight, extreme heat, extreme cold, and damp environments.

When storing the mousepad, make sure no excess pressure is applied to it, especially along the edges and corners.

Do not place heavy objects on top of the mousepad.

For transport, we recommend using the original packaging or other cushioned protective packaging.

Safety Around Children and Pets

The glass mousepad is not a toy.

Keep the mousepad, its packaging, and small accessories (such as the PTFE skates) out of reach of children and pets.

If the mousepad breaks, stop using it immediately and carefully collect the broken pieces, avoiding direct contact with sharp edges.

Disposal

The glass mousepad contains glass and rubber. Dispose of the product and its packaging in accordance with local waste management regulations.

When disposing of broken glass, wrap the fragments securely to prevent injury during waste handling.

Sort packaging materials according to local recycling and waste disposal rules.

Warranty and Liability Disclaimer

The manufacturer or seller is not liable for damage caused by improper cleaning, dropping, impact, misuse, careless handling, or unauthorized modification.

Normal wear and tear, accessory wear, and damage resulting from misuse are not covered under warranty.

This guide provides general information and does not replace product-specific instructions or local regulations.

Contact

If you have questions about a specific product, please contact hiirematid.ee customer support at info@mousepadstore.eu, and be sure to include the product name and order number in your message.